


We will supply a kit for each window pane that you have provided measurements for, including the required number of brackets of the appropriate height. (Note: these brackets can be exchanged if incorrectly specified)

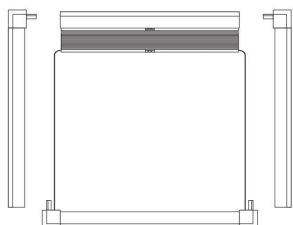

1. ASSEMBLING THE FRAME

Carefully unwrap the parcel, taking great care not to cut any of the cords, if using scissors or a knife. Lay out all the parts to ensure none of the cords are tangled.

Lay out the frame face down, with the closed blind at the top.



Your blind will arrive part assembled with the headrail attached to the top horizontal frame, and the bottom bar attached to the bottom horizontal frame.

2. FIT CORNER JOINTS & COVERS

The corner joints are already part assembled. Two are attached to the top vertical section, and two are attached to the bottom horizontal bar. To complete assembly, insert the locating pegs on each corner section into the corresponding slot on the aluminium frame and slide each corner joint into the Vertical and Horizontal frame pieces to create a rectangular form.

Tighten the small screws to secure all four corners in place. Do not trap any loose cords whilst doing this.

If not already fitted, install the corner covers by pushing them over the corner of the frame and turn over to secure at the back using the screws provided.

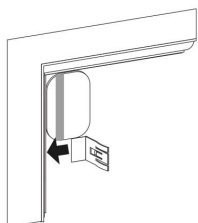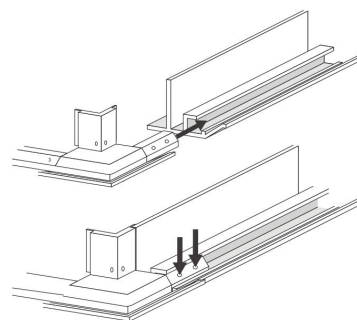


3. INSTALL THE BRACKETS

Using a credit or store card, place the card (long side vertical) in a top corner of the glass to find the correct position to install the first bracket. At the bottom edge of the card, slide the bracket firmly into place between the glazing gasket and seal until it is tight up against the bead. Repeat with all four corners of the window pane. This will ensure alignment with the holes in the frames.

Tip – Light lubrication with washing up liquid may make this easier in some cases

4. FIT THE PERFECT BLIND ONTO THE BRACKETS

Line up the holes in the Perfect Fit frame with the window fixings brackets and simply clip the frame onto one bracket at a time so that the small clip pops into the adjacent hole, holding the Perfect Fit frame in place on the window frame. Your blind is now installed.

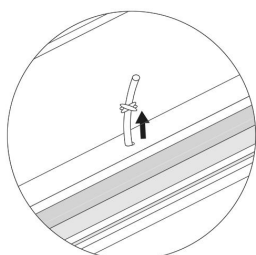

NOTE - TESTING THE TENSION

Once fully open, if the blind starts to lower slightly of its own accord, then you need to make a small adjustment to the tension.

On the top of the frame, you will see the two guide cords are tied off with a knot. Pull the cord through by 5mm and tie another knot to hold it in place. Do this on both of the guide cords to increase the tension.

Retest the blind and make any further small adjustments as necessary.

REMOVING FOR CLEANING & REPLACEMENT

To remove your blind for cleaning or replacement, raise the blind to the open position then, using a flat blade screwdriver, prise the clip out of each hole one at a time and remove the perfect fit frame (leaving the clips in place).