

How to fit and operate your M2M Roller Blind

 GetBlindsOnline

Pack Contents...

Please check you have all the items that are supplied with your M2M Roller blind.

Drive End Bracket:1




Idle End Bracket:1



Safety Tensioning Device: 1



Blind: 1

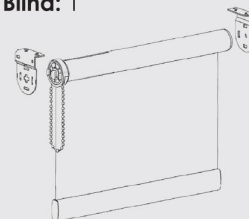

Read these instructions carefully before installing this blind. Blind headrails should not be installed less than 1.5m from the floor.

Fitting your Roller Blind

Important, please ensure you have your fitting brackets before you begin, these are different styles for each end of the blind. Please ensure you also have your safety tensioning device.

You can fit your Roller blind in the following easy steps. Please ensure you complete them in order to ensure correct installation of your blind.

Fitting Your Roller Blind

1 Fitting your Child Safe Roller blind outside the window recess


Please ensure the middle of the blind is precisely in the centre of your window.

If you need to calculate **X**

- Measure the width of the window (measurement **Y**) note down this figure.
- Measure the width of the Roller blind (measurement **Z**) note down this figure.

Take measurement **Y** away from measurement **Z** and divide the figure by 2 to get measurement **X**.

Now follow step 2 then please follow the instruction for **Face Fixing**.

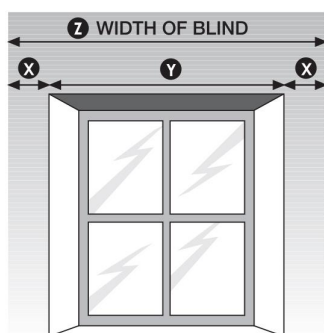

■ TOP FIX ■ FACE FIX

Fitting your Roller blind inside the window (recess fitting)


You must decide whether to **Face Fix** or **Top Fix** your Roller blind.

- **Top Fix** your Roller blind if you have uPVC window frames or there are obstructions like handles.
- **Face Fix** your Roller blind if you want to fit your installation brackets to the window frame.

2 Fitting your fixing brackets

Measure the width of the Roller blind fabric (measurement **W**) in mm as shown in the image below.

Now position the idle end bracket and the drive end bracket making sure the distance between the inside of the brackets is 30mm wider than the measurement **W**. ($W + 30\text{mm} = D$)

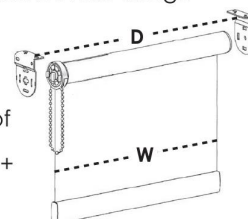

Take care to ensure the fixing brackets are level.

Now mark two fixing holes (**H**) for each bracket with a pencil and attach using appropriate fixings for your wall construction.

Face Fix



Top Fix



3 Fitting your M2M Roller Blind

Locate the pin on the Idle End side of the blind in the Idle End Bracket ensuring the blind is fully-wound. Push gently to compress the spring and locate the lugs on the Drive End of the blind in the Drive End Bracket.

4 Fitting your safety tensioning device

Children can strangle if this device is not installed. Always use this device to keep chains out of reach of children. The device shall be installed at the maximum distance possible from the control mechanism to prevent the chain loop being slack.




To fit the device mark the fixing hole and attach using the appropriate fixings for your wall construction.

Operating Your ChildSafe Roller Blind

 **GetBlindsOnline**

**Operating your Roller blind is simple.
Just follow the instructions below.**

Your M2M Roller Blind is designed to offer easy and accurate positioning of your blind. To lower your blind pull down on the rear ball chain and the same on the front ball chain to raise the blind

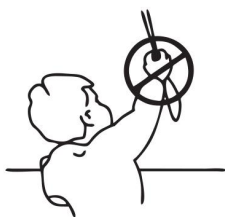

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around the child's neck.

Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

Note: Modification of the design or configuration of the blind or it's integral or non-integral component parts shall not be made without consulting the manufacturer.